

Another Original™ **Mr. Christmas**®

STEPPING SANTA THIS IS NOT A TOY

Please read this entire instruction booklet

I. SETTING UP THE UNIT

1. Attach ladder parts "A" into ladder part "B" as show in Fig. I
2. Extend ladder bar as shown in Fig. II
3. Attach ladder stabilizer as shown in Fig. III.
4. Position the ladder beside your Christmas tree, or any flat surface you desire. Place the control box (sleigh) at the base and Santa on the middle of the ladder, engaging first one hand and then the other with the ladder rails and placing one foot on a ladder rung as shown in Fig. IV.
5. To prevent the light string from obstructing Santa's foot as he moves up and down the ladder, Place the light string's metal ring on the hook which located at the rear of the ladder as shown as Fig.V.

II. OPERATION

1. Turn the Volume ON/OFF switch to the "ON" position. Music will start to play, lights will come on and Santa will begin to climb. Adjust the volume of the music as desired. (See Fig.VI)
2. Press the "RESET" button to hear a different song.

III. TIGHTENING AND REPLACING BULBS

If the Christmas bulbs do not illuminate, you must either tighten or replace the bulbs, as described in the following steps.

1. To avoid electric shock, be sure to unplug the AC adaptor from the power outlet before starting.
2. To access bulb, remove the plastic colored cover by twisting it counter-clockwise. If the bulb is loose, turn the bulb clockwise to tighten as shown in Fig. VII.
3. If defective, replace the bulb. To remove bulb, first remove the plastic colored bulb cover by twisting it counter-clockwise. Turn the bulb counter-clockwise to release and remove the bulb from the socket. Disposes of the defective bulb properly. Insert the new bulb and turn it in a clockwise direction to tighten. Insert bulb cover and turn in clockwise direction to tighten.

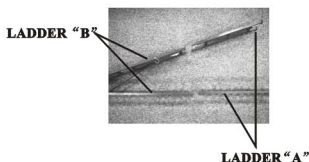


Fig. I

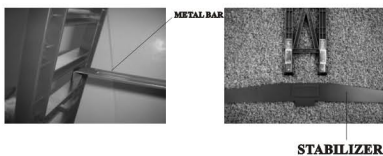


Fig. II

Fig. III



Fig. IV

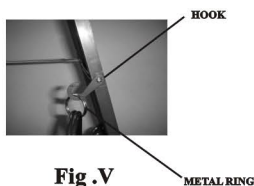


Fig. V

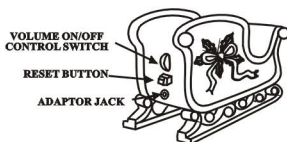


Fig. VI

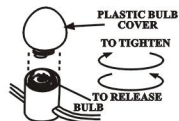


Fig. VII

IV. TROUBLE SHOOTING

Problem	Likely Cause	Solution
No motion, lights or sound	1. No power	Make sure the adapter pin is seated securely in unit jack and adapter is plugged into a working outlet.
	2. Switch is "OFF"	Turn volume ON/OFF switch to "ON"
Santa does not move but lights are on and music plays	Mechanism obstructed	Remove obstruction
	The Up/Down control switch in right palm is stuck at the middle position	Slide the switch lever either up or down
Light is "OFF"	Bad bulb	Replace with a new bulb

FOR MORE INFORMATION ABOUT THIS PRODUCT, PLEASE VISIT OUR WEBSITE!

<http://www.mrchristmas.com>. Replacement bulbs are supplied with your STEPPING SANTA. If these bulbs are not available locally, you can order a package of 6 bulbs by calling our consumer telephone number: 1-800-4MR-XMAS

CAUTION: TO PREVENT FIRE OR SHOCK HAZARD. DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE. DO NOT REMOVE COVER. NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

SAFETY INSTRUCTION

1. Read Instructions- All the safety and operating instructions should be read before the appliance is operated.
2. Retain Instructions-The safety and operating instructions should be retained for future reference.
3. Heed Warnings-All warnings on the appliance and in the operating instructions should be adhered to.
4. Follow Instructions- All operating and use instructions should be followed.
5. Water and Moisture- the appliance should not be used near water- for example, near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool, etc.
6. Heat- The appliance should be situated away from heat sources such as radiators, heat registers. Stoves, or other appliances (including amplifiers) that produce heat.
7. Power Sources - The appliance should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.
8. Object and Liquid Entry - Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.
9. Damage Requiring Service-The appliance should be serviced by qualified service personnel when:
 - A. The power-supply cord or the plug has been damaged; or
 - B. Objects have fallen, or liquid has been spilled into the appliance; or
 - C. The appliance has been exposed to rain; or
 - D. The appliance does not appear to operate normally or exhibits a marked change in performance; or
 - E. The appliance has been dropped, or the enclosure damaged.
10. Servicing -The user should not attempt to service the appliance beyond that described in the operating instructions. All other servicing should be referred to qualified service personnel.